

Button Options for DecoFlex WireFree™ RTS Switch

Available at www.AV-Outlet.com

DecoFlex Channel Buttons <i>White / Ivory with Black Text or Black with White Text</i>	DecoFlex Command Buttons <i>White / Ivory with Black Text, or Black with White Text</i>
<p>DecoFlex Channel button, "ALL" DecoFlex Channel button, "AWNING" DecoFlex Channel button, "BALCONY" DecoFlex Channel button, "BATHROOM" DecoFlex Channel button, "BEDROOM" DecoFlex Channel button, "BLACKOUT" DecoFlex Channel button, "BLIND" DecoFlex Channel button, "BLINDS" DecoFlex Channel button, "BLIND 1" DecoFlex Channel button, "BLIND 2" DecoFlex Channel button, "BLIND 3" DecoFlex Channel button, "BLIND 4" DecoFlex Channel button, "CONF. RM" DecoFlex Channel button, "DECK" DecoFlex Channel button, "DEN" DecoFlex Channel button, "DINING RM" DecoFlex Channel button, "DRAPERY" DecoFlex Channel button, "FOYER" DecoFlex Channel button, "GREAT RM" DecoFlex Channel button, "GUEST RM" DecoFlex Channel button, "HEATER" DecoFlex Channel button, "KITCHEN" DecoFlex Channel button, "LANAI" DecoFlex Channel button, "LIGHTS" DecoFlex Channel button, "LIVING RM" DecoFlex Channel button, "LOBBY" DecoFlex Channel button, "MASTER" DecoFlex Channel button, "MORNING" DecoFlex Channel button, "NIGHT" DecoFlex Channel button, "NURSERY" DecoFlex Channel button, "OFFICE" DecoFlex Channel button, "PATIO" DecoFlex Channel button, "ROMAN" DecoFlex Channel button, "SCREEN" DecoFlex Channel button, "SCREEN 1" DecoFlex Channel button, "SCREEN 2" DecoFlex Channel button, "SCREEN 3" DecoFlex Channel button, "SCREEN 4" DecoFlex Channel button, "SHADE" DecoFlex Channel button, "SHADES" DecoFlex Channel button, "SHADE 1" DecoFlex Channel button, "SHADE 2" DecoFlex Channel button, "SHADE 3" DecoFlex Channel button, "SHADE 4" DecoFlex Channel button, "SHEER" DecoFlex Channel button, "SHUTTER" DecoFlex Channel button, "SHUTTERS" DecoFlex Channel button, "SHUTTER 1" DecoFlex Channel button, "SHUTTER 2" DecoFlex Channel button, "SHUTTER 3" DecoFlex Channel button, "SHUTTER 4" DecoFlex Channel button, "SKYLIGHT" DecoFlex Channel button, "STUDY" DecoFlex Channel button, "SUN ROOM" DecoFlex Channel button, "THEATER" DecoFlex Channel button, "WOVEN"</p>	<p>DecoFlex Command button LEFT, "CLOSE" DecoFlex Command button RIGHT, "OPEN"</p> <p>Note: The Open and Close buttons are for use with interior window covering, exterior solar screens/shade, and rolling shutter applications. They are not for use with awning applications.</p> <div data-bbox="857 520 1432 1423" data-label="Image"> </div> <p>Available at www.AV-Outlet.com</p>