



AC153 6CH Timer Manual Instruction



1.Features

- 1. Stylish functional appearance.
- 2. With manual click buttons, high reliability and anti-interference.
- 3. High-hardness acrylic panels for durability.
- 4. Timer function, can set an open and close time every day.
- 5. Universal 1.5V dry battery, convenient for installation and purchase.
- 6. A-OK standard FSK remote protocol.
- 7. Only two separate times of UP and DOWN, can be set for 24 hours of timed launch.
- 8. Can set different switching times every day from Monday to Sunday.
- 9. All settings will be retained even when power off and on again.


2.Paramaters

Model	RF Frequency	Transmit Power	Transmit Current	Standby current	Stand-by Time	Power Supply	Working Temperature
AC153-06	433.92MHz	≤ 10mW	≤ 60mA	≤ 5uA	2 years	1.5V dry battery	-20℃~+55℃

! Precautions for product installation

- 1. The minimum distance between the transmitter and the ground is 1.5m;
- 2. The furthest open distance between the receiver and the transmitter is less than 80m;
- 3. Do not install it on metal objects; otherwise, the launching distance will be affected;
- 4. Do not install in a humid and sun-exposed place, otherwise it will affect its service life.


3. Product diagram

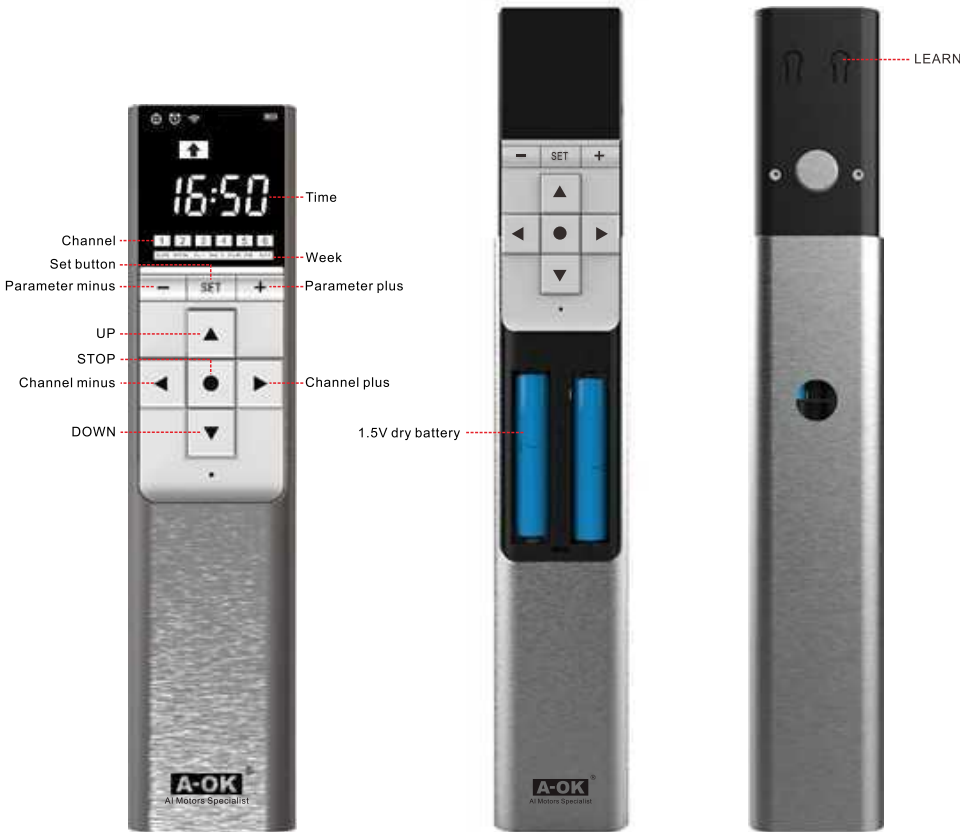

4.Function setting

1. Time setting


Note: In normal operation, you can directly press the channel plus or minus button to select the channel

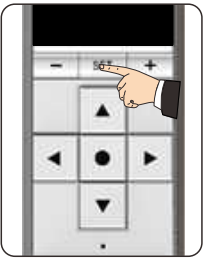


Long press SET button for 3s, clock icon flashes




After the clock icon blinks, press the Stop button to enter the setting page

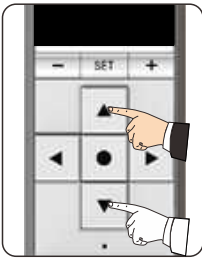

Press the up/down button to plus or minus the specific time.
(Long press the up/down button for 1.5s to quickly set the time value)

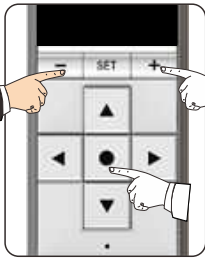


Press the "left or Right" button to set the week, and press the "stop" button to switch the hour/minute selection

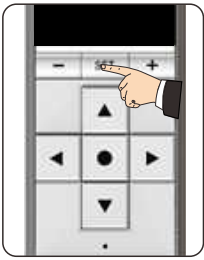

After the time is set, long press the SET button for 3s to save the setting and exit the main page. Otherwise, long press the Stop button for 3s to exit the main page without saving the setting parameters

2. Timing Settings (one and off time that can be set every day)

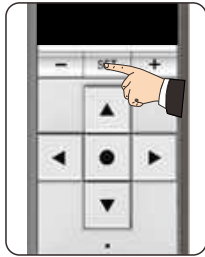


Long press SET button for 3s, clock icon flashes




Press the right button to switch to the timing icon



Press the left or right button to select the week setting

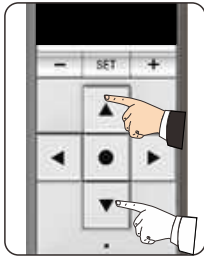

Press the Up or Down button to set the time, and press the stop button to switch hour/minute (long press the up/Down button for 1.5s to quickly set the time).

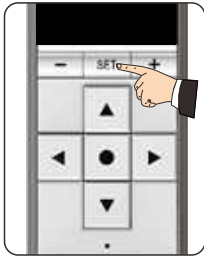

After the time is set, long press the SET button for 3s to save the setting and exit the main page. Otherwise, long press the Stop button for 3s to exit the main page without saving the setting

5.Troubles and shootings

S/N	Trouble	Reason	Solution
1	Operate transmitter, indicator is normal, receiver does not respond	1. The receiver's not responding at all 2. Other functions are normal, the motor cannot go up and down	A. The receiver is not powered on or the transmitter is not aligned with the receiver B. Receiver limit or unplugged limit switch
2	No response after pressing buttons	1. The transmitter battery is power off 2. The position of the receiving antenna is incorrect	A. change the new battery B. Proper antenna placement

Reset Timers

- Press "Set" until the timer icon flashes.
- Press "+"
- Press "Stop" until the remote exits timer mode.